

This quick guide explains basic function settings and how to shoot and play back images. You can take this guide with you for shooting. For detailed instructions, refer to the Camera Instruction Manual (CD-ROM).

Quick Start Guide

1 **Insert the battery.**

2 **Insert a card.**
With the card's label facing toward the back of the camera, insert it into the card slot.

3 **Attach the lens.**
Align it with the red dot.

4 **Set the lens focus mode switch to <AF>.**

5 **Set the power switch to <ON>.**

6 While holding down the center of the Mode Dial, set it to <A+> (Scene Intelligent Auto).

7 **Focus the subject.**
Aim the viewfinder center over the subject and press the shutter button halfway to autofocus.

8 **Take the picture.**
Press the shutter button completely to take the picture.

9 **View the image.**
The captured image will be displayed for 2 sec. on the LCD monitor.

● The ☆ on the right of the function indicates that the function is available only in Creative Zone modes.

● **Number of Possible Shots with Viewfinder Shooting**

Temperature	At 23°C / 73°F	At 0°C / 32°F
Possible shots	Approx. 1090 shots	Approx. 980 shots

Image Playback

Index

Magnify

SET

Playback

Erase

Select image

INFO. Shooting information

Preparation

Menu Operations

<MENU> button

LCD monitor

<SET> button

<▲> <▼>

1. Press the <MENU> button to display the menu.
2. Press the <▲> key to select a secondary tab, then press the <▼> key to select the desired item.
3. Press <SET> to display the setting.
4. After setting the item, press <SET>.

Basic Zone Modes

Image quality L

Beep Enable

Release shutter without card ON

Image review 2 sec.

Creative Zone Modes

Image quality L

Beep Enable

Release shutter without card ON

Image review 2 sec.

Menu items

Menu settings

Image-recording Quality

- Select [1: Image quality], then press <SET>.
- Turn the <▲> dial or press the <▲> key to select the image-recording quality, then press <SET>.

Image-recording quality

RAW

JPEG

Pixels recorded

Possible shots

RAW: Turn the <▲> dial to select the quality.

JPEG: Press the <▲> key to select the quality.

Picture Style ☆

Picture Style

Auto

Standard

Portrait

Landscape

Neutral

Faithful

Under the [4] tab, select [Picture Style], then press <SET>.

Press the <▲> key to select a Picture Style, then press <SET>.

Style	Description
Auto	Color tones optimized for the particular scene.
Standard	Vivid colors and sharp images.
Portrait	Nice skin tones and slightly sharp images.
Landscape	Vivid blue skies and greenery and very sharp images.
Monochrome	Black-and-white images.

- For <Neutral> and <Faithful>, refer to the Camera Instruction Manual (CD-ROM).

Quick Control

Shooting mode

Exposure compensation/AEB setting

Picture Style

AF operation

White balance

White balance correction

Drive mode

Aperture

Flash exposure compensation

AE lock

Highlight tone priority

ISO speed

Wi-Fi function

Custom Controls

Image-recording quality

Auto Lighting Optimizer

Metering mode

White balance bracketing

- Press the <▲> or <▼> key to select a function, then turn the <▲> or <▼> dial to set it.
- In Basic Zone modes, the settable functions differ depending on the shooting mode.

Electronic Level

Each time you press the <INFO.> button, the screen display will change.

Display the electronic level.

Custom Functions

C.Fn I: Exposure

- 1 Exposure level increments
- 2 ISO speed setting increments
- 3 Bracketing auto cancel
- 4 Bracketing sequence
- 5 Number of bracketed shots
- 6 Safety shift

C.Fn II: Autofocus

- 1 Tracking sensitivity
- 2 Acceleration/deceleration tracking
- 3 AI Servo 1st image priority
- 4 AI Servo 2nd image priority
- 5 AF-assist beam firing
- 6 Lens drive when AF impossible
- 7 Orientation linked AF point
- 8 Superimposed display
- 9 AF Microadjustment

C.Fn III: Operation/Others

- 1 Dial direction during Tv/Av
- 2 Focusing screen
- 3 Multi function lock
- 4 Warnings ! in viewfinder
- 5 Custom Controls

